


SOLAR FLEX KITS™

User Manual

GP-FLEX 35
GP-FLEX-55
GP-FLEX-110
GP-FLEX-220
GP-FLEX-550

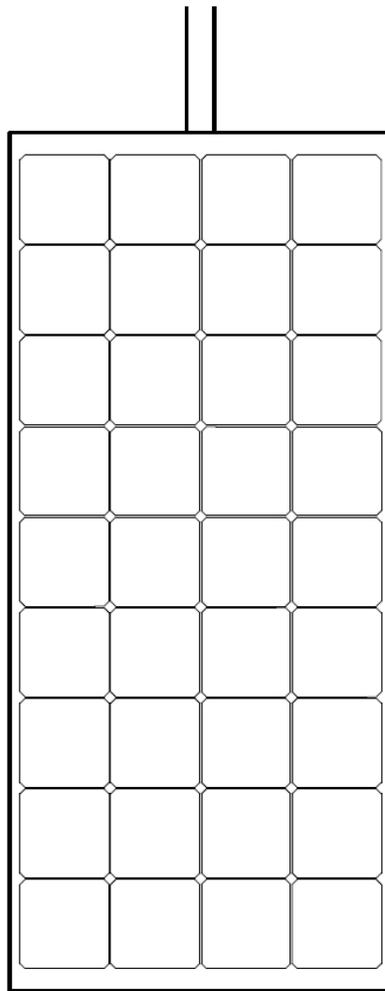

© 2021 Go Power!

Worldwide Technical Support and Product Information gpelectric.com

Go Power! | Dometic

201-710 Redbrick Street Victoria, BC, V8T 5J3

Tel: 1.866.247.6527

73835_MAN_GP_SOLAR_FLEX_rev1



CONTENTS

2. GENERAL INFORMATION	4
2.1 HOW DOES A GO POWER! SOLAR CHARGING KIT WORK?	4
2.2 CAUTIONS	6
2.3 DISCLAIMERS.....	7
3. PLANNING LOCATIONS.....	8
3.1 PLAN YOUR SOLAR SYSTEM SETUP	8
3.2 PLACEMENT OF SOLAR PANELS	9
3.3 LOCATING THE SOLAR CHARGE CONTROLLER	10
4. INSTALLATION	11
4.1 SOLAR PANELS.....	11
4.2 REFRIGERATOR VENT OPTION 1	13
4.3 REFRIGERATOR VENT OPTION 2	13
4.4 CABLE ENTRY PLATE	14
4.5 INSTALLING THE SOLAR CHARGE CONTROLLER.....	14
4.6 INSTALLING THE FUSE AND FUSE HOLDER	14
4.7 CONNECTING SOLAR CHARGE CONTROLLER TO BATTERY BANK	15
4.8 INITIAL CONNECTION AND OPERATING	15
5. MAINTENANCE	16
6. WARRANTY RETURN PROCEDURE.....	17

Congratulations on purchasing your Go Power! Solar Flex Kit. You have chosen a clean, quiet and sustainable power source. Go Power! Solar Kits allow you to power appliances in your RV, without hooking up to shore power or a noisy generator. Go Power! Solar kits will keep your batteries charged, ensuring you have power when you need it.

This mobile DC power system allows you to enjoy the luxuries that electricity provides, without a campsite hookup. For simple battery maintenance or full-time live-aboard power, Go Power! Solar Power Kits are available in a variety of sizes and can be installed on RVs, campers, trailers, fifth wheels and motor homes. As with any off-grid power systems, the user is required to manage electrical loads to ensure continual power availability for essential services. Your location and season (hours of sunlight available) play a role in how much energy can be harnessed from this kit.

Note This manual will aid in the process of installing the Go Power! Solar Kit. Please read and understand this manual and all included manuals before installing the Go Power! Solar Kit. Review all diagrams included in this guide for the easiest and safest installation. **Please retain this manual for future reference.**

2.1 HOW DOES A GO POWER! SOLAR CHARGING KIT WORK?

The solar panel converts the sun's energy into DC electricity and this electricity charges the battery. The battery stores the electricity, similar to a water tank storing water. This battery power may be used at any time to operate DC powered devices connected to the battery. To increase the battery service life, a solar controller is used to prevent the solar panels from overcharging the batteries. This is process is managed by the Solar Charge Controller included in this kit. See Figure 2-A (below) and 2-B (on following page) for solar system examples.

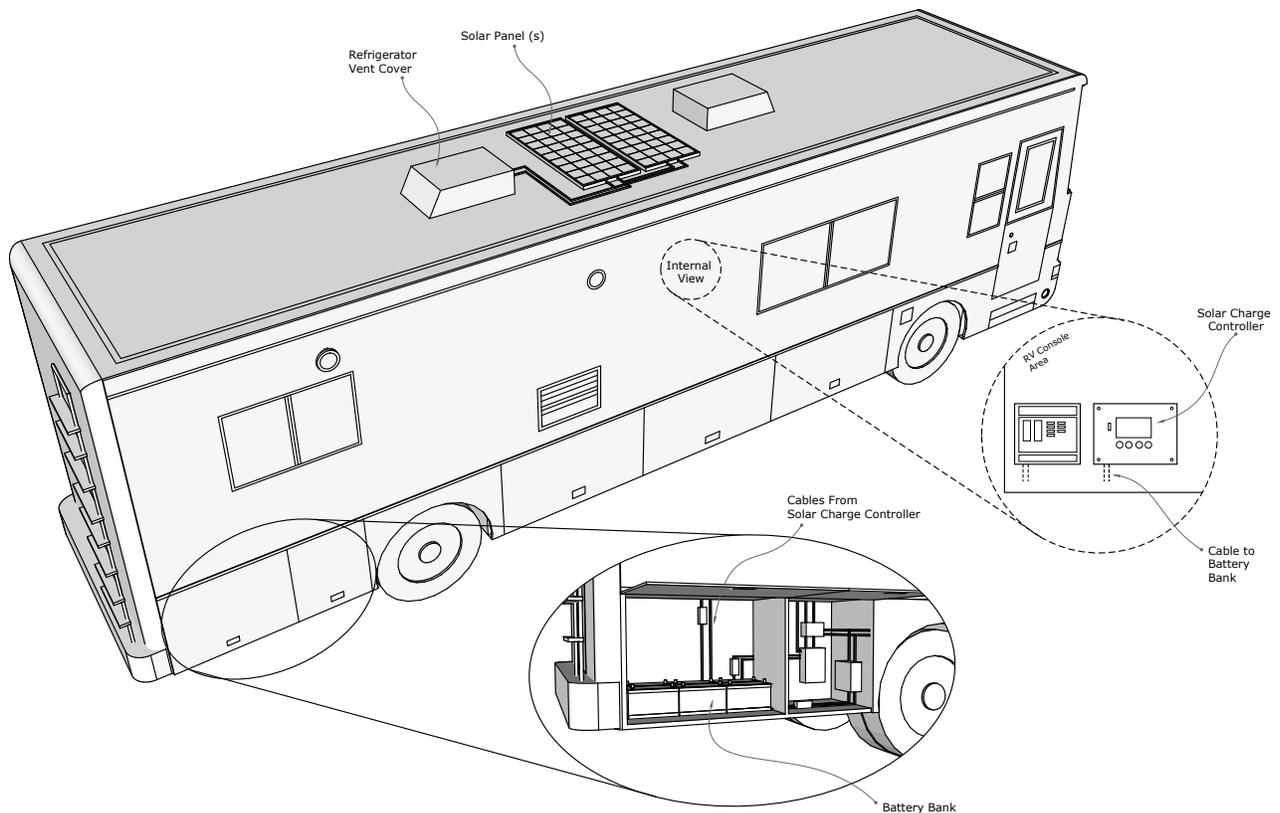


FIGURE 2-A: TYPICAL RV INSTALLATION

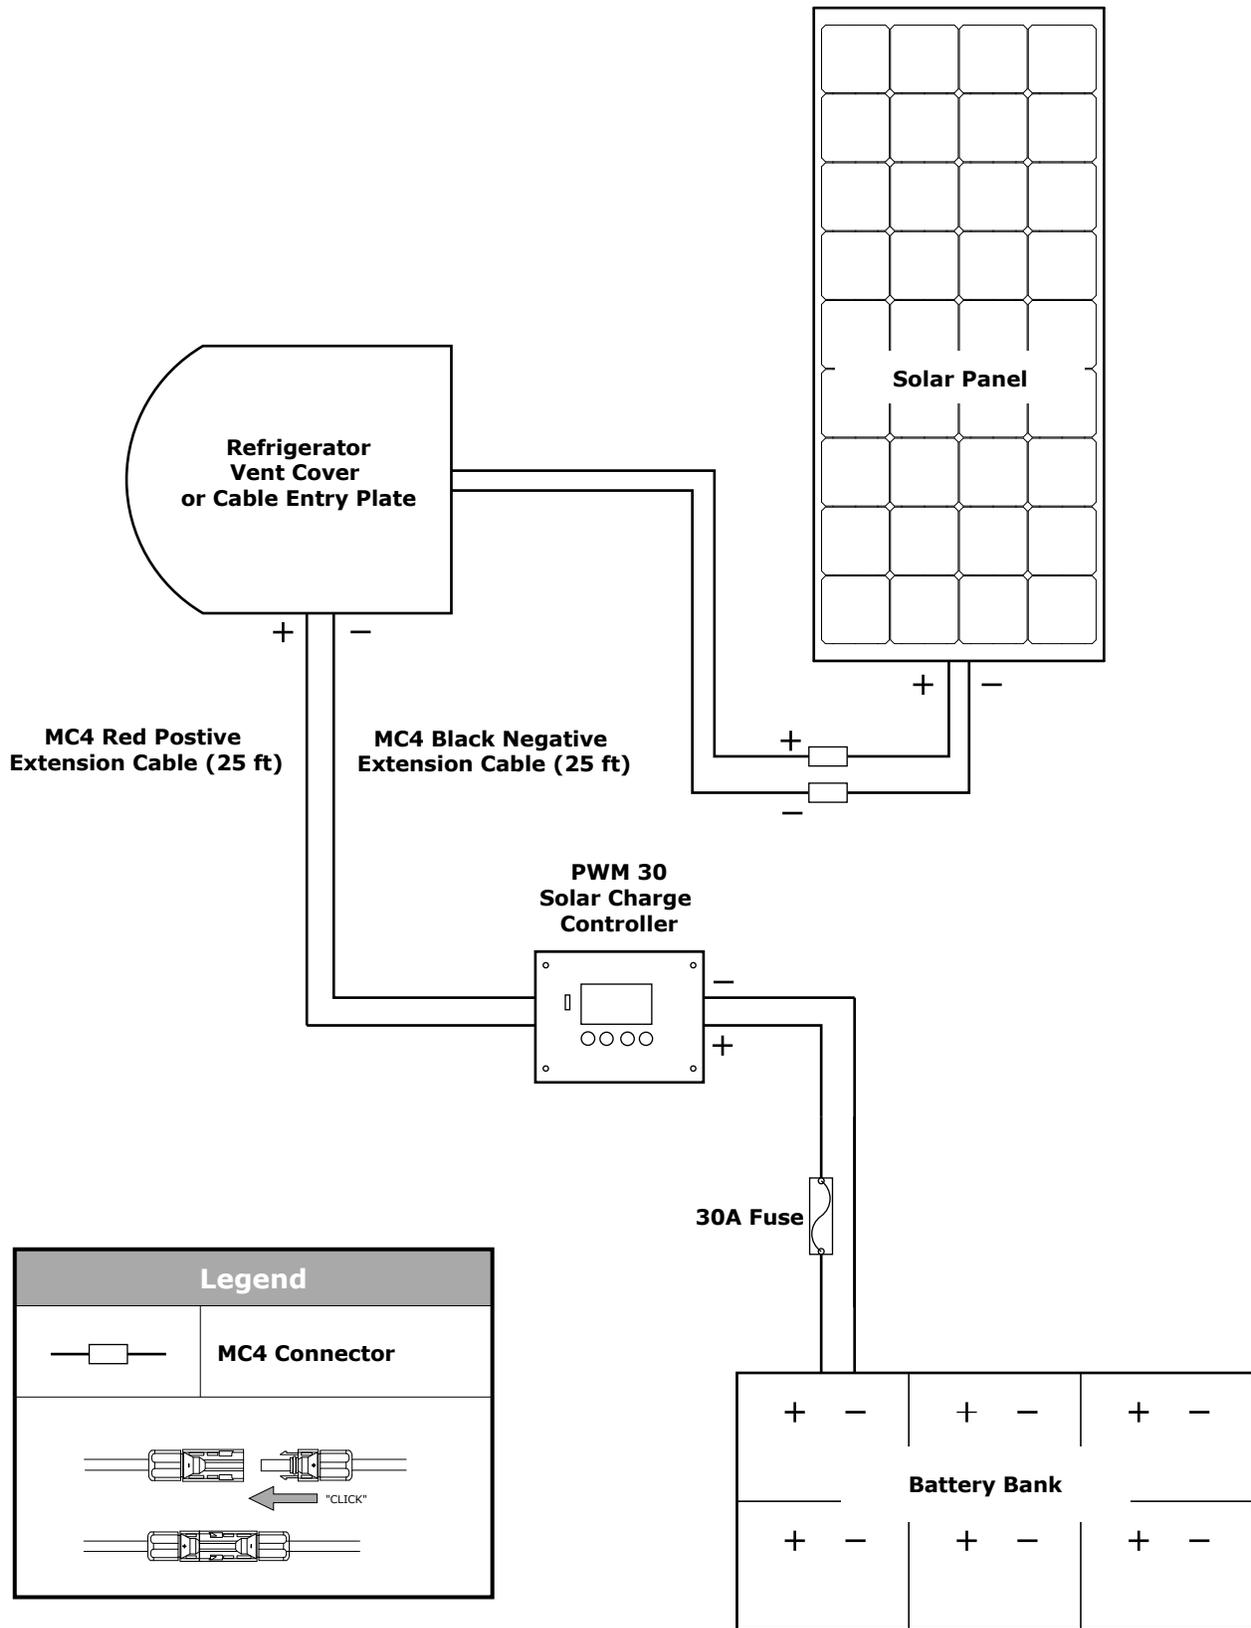


FIGURE 2-B: FLEX 100 WIRING DIAGRAM

2.2 CAUTIONS

	<p>Disconnect all power sources before attempting installation</p>	<p>Electricity can be very dangerous. It is critical that the electrical layout and installation of the photovoltaic system be completed by an electrician or qualified personnel and in compliance with the detailed procedures in this manual.</p>
	<p>Solar panel safety</p>	<p>Photovoltaic panels generate DC electricity when exposed to sunlight or other light sources. Contact with the electrically active parts of the panel, such as terminals, can result in burns, sparks and lethal shock whether the panel is connected or disconnected. Direct current will arc across a gap and may cause a lethal shock when improper connection or disconnection is made. DO NOT connect or disconnect modules when they are energized by exposure to sunlight. Contacts and cable with frayed or exposed conductors should not be used. Do not touch terminals while panel is exposed to light. Cover the panel face completely with opaque material to halt the production of electricity when installing or working with panels or wiring. Systems must be handled with extreme caution — failure to do so may result in possible injury or death.</p> <p>When panels are connected in parallel, amperages are additive. Consequently, a system assembled from photovoltaic panels can produce high amperage, which constitute an increased hazard.</p> <p>When panels are connected in series, voltage are additive. Consequently a system assembled from photovoltaic panels can produce high voltages, which constitute an increased hazard.</p>
	<p>Battery and wiring safety</p>	<p>Observe all safety precautions of the battery manufacturer when handling or working around batteries. When charging, batteries produce hydrogen gas, which is highly explosive. Work in a well ventilated area and use caution when making or removing electrical connections. Ensure wires are disconnected from their power sources when wiring. Do not expose battery to open flame, cigarettes or sparks. Shield skin and eyes from battery acid. Cable leads should not be crossed or shorted together. If shorting occurs, completely cover the panel with a dark, light-proof material BEFORE disconnecting the cables. Modules must not be connected or disconnected when there is a current source attached, or when the module is exposed to light.</p> <p>Ensure all connections are tight and secure. Loose connections may generate sparks, heat and in extreme cases may catch fire. Be sure to check connections one week after installation to ensure they are still tight.</p>
	<p>Work safely</p>	<p>Wear protective eye wear and appropriate clothing during installation. Use extreme caution when working with electricity and when handling and working around batteries. Use properly insulated tools only.</p> <p>Do not carry the panels by the junction box or by the electrical cables. Do not walk on the panels. Do not handle or install modules when they are wet or in windy conditions. Do not allow standing water to accumulate on the module. Go Power! recommends a minimum cable bend radius equal to or greater than 40 mm (1.5").</p>
	<p>Observe correct polarity at all times</p>	<p>Reverse polarity of the battery terminals will cause the controller to give a warning tone. Reverse connection of the array will not cause an alarm but the controller will not function. Failure to correct this fault could damage the controller.</p>



Do not exceed the voltage and current ratings of the Solar Controller

The total current of the solar system is the sum of the short circuit current of the solar panels in parallel, multiplied by a safety factor of 1.25. The resulting system current is not to exceed the amperage rating of the controller. The voltage of the array is the rated open circuit voltage of the solar panels and is not to exceed 28volts.

The current rating of the solar system is the sum of the Maximum Power Current (Imp) of the solar PV strings in parallel. The resulting system Imp current is not to exceed 30A. If your solar system exceeds these ratings, contact your dealer for a suitable controller alternative.



ADDITIONAL SAFETY CONSIDERATIONS

- All installations must be performed in compliance with the National Electrical Code (NEC) and applicable local codes
- In Canada, installations must comply with CSA C22.1, Safety Standard for Electrical Installations, Canadian Electrical Code, Part 1
- Installation should be performed only by qualified personnel.
- Do not attempt to repair the module — there are no user-serviceable parts
- Do not stand on, drop, scratch, or allow objects to fall on modules as it may damage them and void the warranty.
- Do not place objects on the modules, even for a moment. Doing so could crack a cell if the object is heavy or, if one or more cells on the panel are shaded from sunlight, those cells can get very hot and potentially damage the object.
- Do not carry the panels by the electrical cables or junction box
- If the panel sheet (front or back) is torn, contact with the module surface or frame may result in electric shock
- Damaged hardware (junction boxes, cables and connectors) represent shock and laceration hazards. Remove these modules from service and contact Go Power! for disposal instructions
- Cracked or damaged metal ribbons in the panel are an electrical hazard. Remove modules from service and contact Go Power! for disposal instructions
- Do not install or handle the modules when they are wet or during periods of high wind
- Do not allow water to pool on or near the modules
- **Please keep these instructions for future reference**

2.3 DISCLAIMERS

IMPORTANT: Please follow installation and wiring instructions exactly as outlined to ensure safety. We recommend installation by an RV technician or professional electrician to ensure adherence to relevant electrical codes. We have made every reasonable effort to ensure the accuracy of the instructions in this manual, but Go Power! does not guarantee that the information is error free, nor do we make any other representation, warranty or guarantee that the information is accurate, correct, reliable or current. **The specifications in this manual are for reference purposes only and are subject to change without notice.** For additional information please see www.gpelectric.com.

DISCLAIMER: Go Power! disclaims liability for any direct, indirect or incidental damages caused by, or in case of, installation not performed following the instructions and cautions in this manual. Go Power! will refuse requests for exchanges or returns, resulting from the purchase and installation of items which do not comply with local codes. To avoid such concerns Go Power! recommends installation by a professional electrician or RV technician. Examples that are shown within this manual are for illustrative purposes only.

3.1 PLAN YOUR SOLAR SYSTEM SETUP

a. Screwdriver (Phillips)	h. 1/16" and 3/8" Drill Bits
b. Keyhole Saw	i. 5/16" & 7/16" Wrench
c. Pencil or Marker	j. Heat Gun
d. Pliers	k. Caulking Gun
e. Wire Strippers and Cutters	l. Sealant
f. Butt Splice Crimping Tool	m. Digital Multimeter (troubleshooting only)
g. Electric Hand Drill	n. Torque Driver (optional)

Design your solar set up here:

3.1 PLAN YOUR SOLAR SYSTEM SETUP

1. Take a few minutes before commencing any installation work to layout your solar system on paper first. Use the diagrams within this manual to help.
2. Complete a simple block diagram identifying the key components and connections of your Solar charging system: Solar Panels, MC4 Positive and Negative Extension Cables, Solar Charge Controller and your Battery Bank as detailed in the diagrams.
3. Identify and prepare easy/safe access to possible installation locations in the 3 key installation areas within your RV;
 - **Roof** Solar Panels
 - **Instrument/Controls** Solar Charge Controller and/or Inverter Remote
 - **Storage Compartments** Inverter, Converter/Charger, Transfer Switch
4. Identify on your RV if you have a **Cable Entry Plate (GP-CEP)** see **Fig 3-A** pre-installed by the RV Manufacturer. The Cable Entry Plate makes the Solar Panel to Solar Charge Controller installation simpler. (After market purchase of GP-CEP available)
5. If you do not have the Cable Entry Plate pre-installed on your RV. You will be following the 'Routing Power Cable through the Refrigerator Vent' steps.
6. Whilst on the roof of your RV identify the refrigerator vent and investigate the vent-fastening hardware.

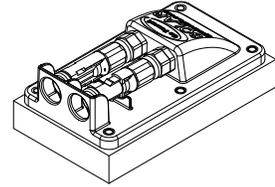


FIGURE 3-A: GP-CEP

3.2 PLACEMENT OF SOLAR PANELS

Solar modules should be installed strictly in accordance with the instructions provided in this manual. The structure on which the module is attached must be completely rigid and remain so in all weather conditions, such as extreme winds or heavy snow. In the case of marine applications, structures must remain rigid in heavy storm conditions and be impervious to long-term saltwater exposure.

Solar panels will not stay flexible once fixed to the mounting surface. Bending or flexing of the mounting surface can result in fire and/or permanently damage the solar module components.

BEFORE GLUING SOLAR PANELS - you must carefully position all solar panels **BEFORE** applying adhesives. Once panels are glued to the supporting structure, they cannot be repositioned.

UTILIZATION — We strongly recommend the use of flame retardant and chemically resistant cables, especially in marine environments or in other extreme operating conditions.

1. Remove all solar panels from their boxes. **Set aside the boxes as they will be used in the instructions to follow.**
2. Using the solar panel boxes, plan the layout of the panels on your RV rooftop. Please use the notes below to help select the best panel location(s)

Note

- Placement of the panel(s) should be as close together as possible. Each panel has 3.3' of cable coming from the junction box. It may be necessary to use solar panel extension cables. If required, longer extension cables can be purchased. Please contact customer service at 1.866.247.6527 to purchase.
- Select a location where the mounting surface is at least 1/2" thick and strong enough to support the solar panel mounting hardware.
- Solar panels should be located a minimum of 3' from the front of RV to reduce wind load on the panels.
- Avoid internal wiring when selecting the solar panel mounting locations for drilling the mounting holes.
- Ensure fixed obstacles, such as air conditioners, will not shade the solar panels. (Shading can greatly reduce the performance of the solar system).

3.3 LOCATING THE SOLAR CHARGE CONTROLLER

The GP-PWM-10 or GP-PWM-30 is included in all Go Power! RV Solar Kits detailed in this manual except for the expansion kits (50E and 100E). The GP-PWM provides the necessary protection for the RV battery system. A condensed version of the installation instructions appear in this manual. However, please read the full installation manual included with the GP-PWM-10 or GP-PWM-30 Solar Charge Controller or visit gpelectric.com for more product information and manuals.

1. Plan where the Solar Charge controller will mount, see Figure 3-B.

- Note**
- The Solar Charge Controller is designed to be mounted vertically in an indoor location inside a weatherproof enclosure.
 - Ideally the Solar Charge Controller should be located so it can be easily seen for monitoring system operation.
 - The location will need access to the cable ends from the solar panels and the battery compartment.



WARNING: Failure to secure the Solar Charge Controller could cause it to become dislodged while the RV is in transit and cause severe damage to the unit and/or the RV.

4. INSTALLATION

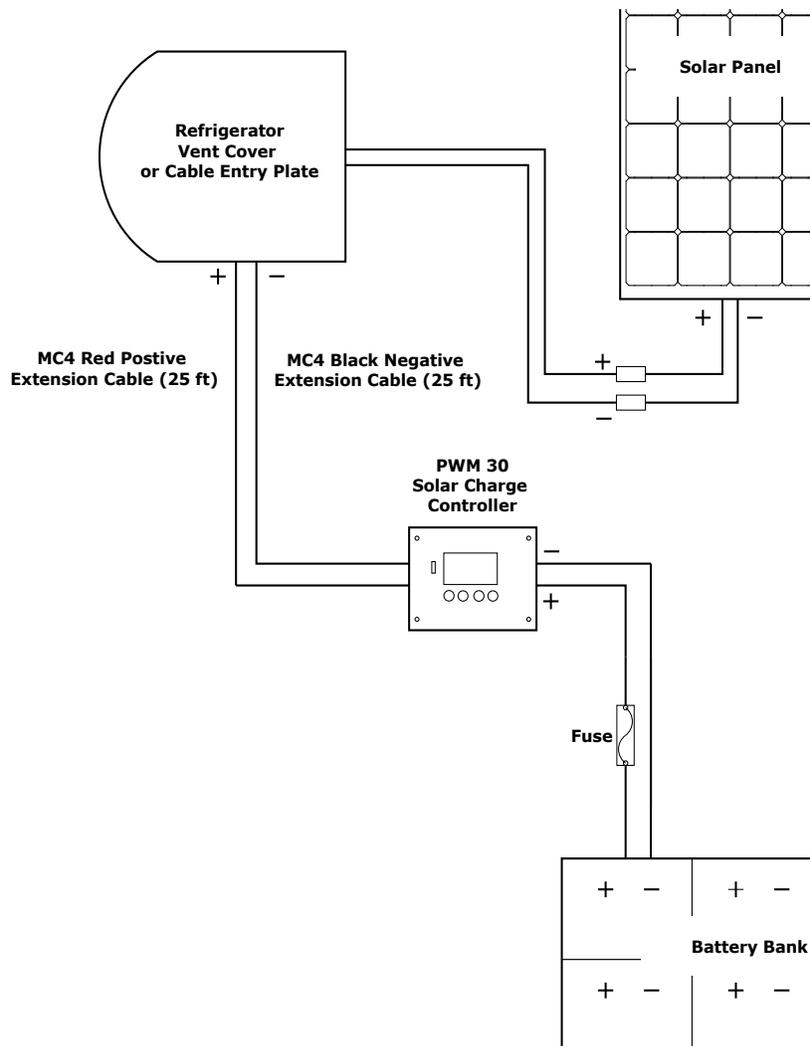


FIGURE 3-B

4.1 PLACEMENT OF SOLAR PANELS



WARNING: Photovoltaic panels generate DC electricity when exposed to sunlight or other light sources. When exposed to light, contact with the electricity active parts of the panel, such as terminals, can result in burns, sparks and lethal shock whether the panel is connected or disconnected.

Do not touch the terminals while the panel is exposed to light. Cover the panel faces completely with an opaque material to stop the production of electricity when working with panels or wiring – the cardboard shipping boxes are the perfect option to cover glass surface of the panels.

Note

Panels are not recommended to bend beyond 30° (for 100W Modules, 30° = 2.7", 69mm Bend)

Site Considerations — Excluded Operating Environments

Certain extreme operating environments are not recommended for Go Power! products and are excluded from the Go Power! limited warranty. These include (but are not limited to): winds exceeding 45 MPH, flooding or immersion in water or other fluids, contact with liquids or substances with a pH less than 6.5 or greater than 8.5, and contact with fire, projectiles, lava flow, volcanic eruptions, or meteors.

Mounting Configurations

Modules installed over a roofing system must be mounted over a flat, fire-resistant roof covering with the appropriate safety rating for the application. While modules can be mounted at any vertical or horizontal angle, it is recommended that they are installed at a minimum 10-degree angle to reduce dirt accumulation and soiling.



WARNING: Do not install panels on a surface that is not fire resistant or that can be damaged by high temperatures. These panels are designed to not catch fire themselves but can get hot during normal operation and excessively hot in some failure conditions such as cracked cells or failed protection diodes. Go Power! is not responsible for heat damage such as discoloration, holes or fire due to improper installation.

Water entering the junction box could present a safety hazard, and junction boxes should be oriented on the uppermost position of the panel. The junction box should never be mounted in a depression. Note the junction box manufacturer rates this product with an ingress protection rating of IP67 for the box.

Modules may be attached using an adhesive on the panel backside or by using the grommet holes as attachment points. Go Power! does not recommend a preferred attachment method or make any claim as to the safety of the attachment.

Mount modules away from obstructions such as vents, AC Units, etc.

Module Handling

Always use gloves when handling modules. Modules are sensitive to oils and abrasive surfaces — not doing so may lead to scratching and soiling. Minimize module contact as much as possible, especially with any abrasive surfaces. Do not place anything on the modules. Do not lift modules by the cables or the junction box under any circumstances. Remove fingerprints from the panels by washing the panel as described below.

The panels are designed to withstand a 30-degree bend top to bottom (with the junction box placed on the top end) — approximately 8cm of deflection. Care must be taken not to bend, flex, or twist panels excessively when handling. Do not place sharp objects on the panels — this may cause a puncture or damage, resulting in decreased power and creating a potential safety hazard.

Do not use blunt or sharp force with other hardware (junction boxes, cables and connectors). The resulting damage could render the module unusable.

1. Remove shipping plastic from panel
2. Expose the panel(s) to sunlight and use a voltmeter to test for DC Voltage
3. Locate the solar panels on the RV roof replacing each of the boxes used in the planning step.
4. Locate the Cable Entry Plate / Fridge Vent or Access Point on the roof.
5. Attached the MC4 Positive and Negative Extension Cables to the solar panel(s).
6. Test that the end solar panel cables can reach the GP-CEP / Fridge Vent or Access Point.

- Use the screws and washers provided in the kit to secure the solar panel to the roof. Or an adhesive sealant can be used to attach the panels to the roof. Please contact your vehicle manufacturer for specifications on an appropriate sealant.
- Apply sealant under, around and on top of each of the 6 screws to ensure a watertight installation.



WARNING: Using an adhesive can create a permanent mounting situation. It is strongly advised that placement is well thought out and that panel function has been tested before mounting. Go Power! is not responsible for damage caused by the removal of any solar panels.




WARNING: The Panels must be securely fastened. Failure to do so could cause the panels to lift and separate from the surface while in transit which could cause significant damage and/or injury.

Note

Use appropriate sealant as recommended by your RV Dealer for your RV roof.

ELECTRICAL CONNECTIONS

The connectors used in these panels allows for modules to be connected in series or parallel.

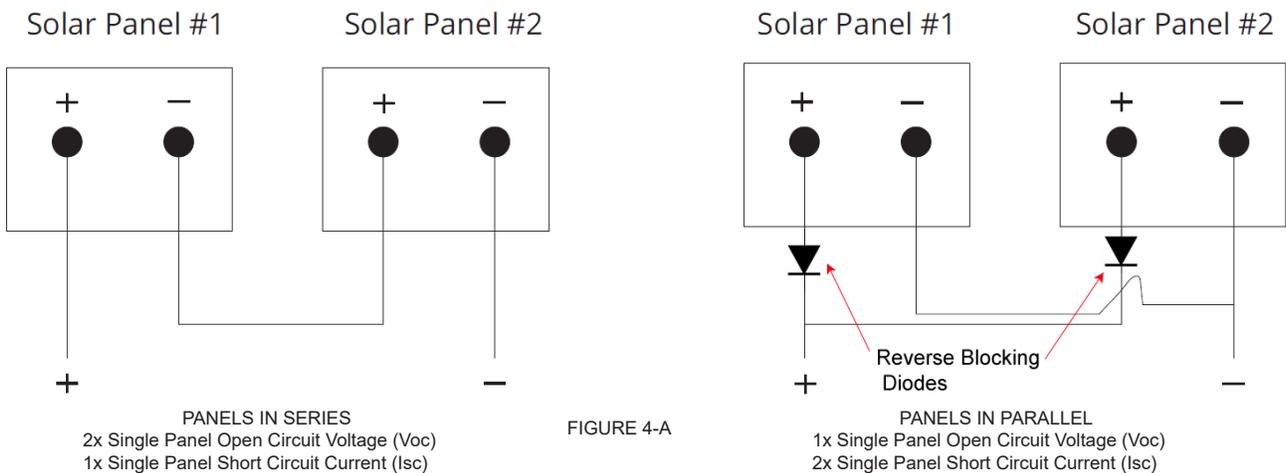

SERIES CONNECTION:

Connecting the panels in series increases the voltage of the system, so the two panels produce double the voltage as compared to one panel.



WARNING: Three or more series connected panels can produce voltages in excess of 60V DC which is considered to be high voltage and an increased safety hazard.

To connect panels in series, connect the negative (-) plug of panel #1 to the positive (+) plug of the panel #2. See Figure4-A left.

PARALLEL CONNECTION:

Connecting the panels in parallel increases the current of the system, so the two panels produce double the current as compared to one panel. It is recommended that reverse blocking diodes be used on the positive lead of each module connected in parallel to prevent damage and unsafe conditions.



WARNING: If shading occurs without additional electronic components, such as a reverse blocking diode, the by-pass diode inside the junction box may be damaged leading to further panel damage and unsafe conditions including extreme temperatures.




WARNING: When panels are connected in parallel, currents are additive. Consequently, a system assembled from photovoltaic panels can produce high amperage, which constitute an increased hazard.

To connect panels in parallel, connect the positive (+) plug of panel #1 to the positive (+) plug panel #2 Connect the negative (-) plug of panel #1 to the negative (-) plug of panel #2. See Figure 4-A Right. In this configuration, cable adapters will be needed.

4.2 REFRIGERATOR VENT ACCESS - OPTION 1

1. Locate the refrigerator vent on the roof of the RV. Remove vent cover to gain access to the duct opening.
2. Drill a hole through the side of the vent (5/8" hole).
3. Remove any sharp edges from the hole.
4. Insert a rubber grommet (not included) into the hole.
5. Insert the MC4 positive and negative extension cables through the hole and carefully route it to the solar charge controller. Be certain to leave enough slack to allow cable routing from module to vent along desired path.
6. Use cable clamps with the #6 self-tapping screw and/or tie wraps every few feet along roof and interior route to the solar charge controller.
7. Ensure all penetrations into the roof or surface are watertight. Use an appropriate sealant as recommended by your RV Dealer to seal holes wherever necessary.
8. Replace vent cover.

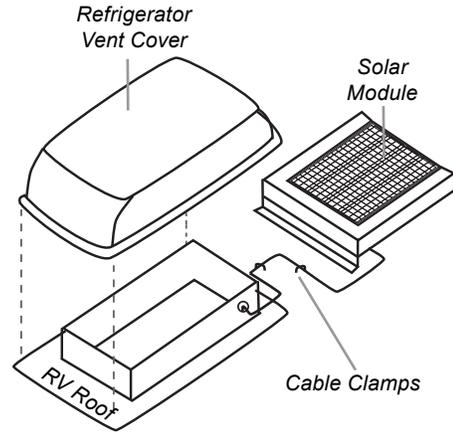

Caution: The drilled hole may have sharp edges or burrs - REMOVE


FIGURE 4-B

4.3 REFRIGERATOR VENT ACCESS - OPTION 2

1. Locate the refrigerator vent on the roof of the RV. Remove vent cover to gain access to the duct opening.
2. Thread the MC4 positive and negative extension cables carefully through the screen and into opening.
3. Enlarge screen grid hole if necessary
4. Remove any sharp edges from the hole.
5. Avoid strapping the power cable to existing wire between the module and the battery.

Note Allowing a few inches of space between the power cable and existing wire will lessen the chance of voltage loss through thermal conduction.

6. Use cable clamps with the # 6 self-tapping screw and/or tie wraps every few feet along RV roof and interior route to the solar charge controller.
7. Ensure all penetrations into the RV roof are watertight. Use an appropriate sealant as recommended by your RV Dealer to seal holes wherever necessary.
8. Replace vent cover.

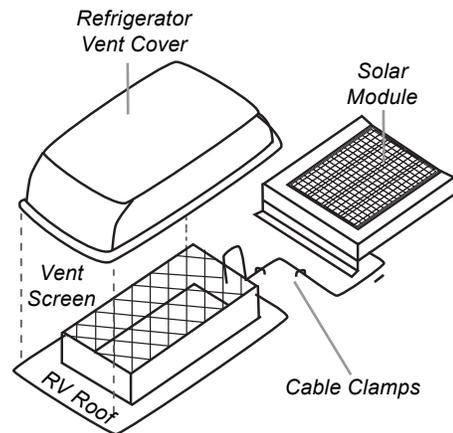

Caution: The vent screen may have sharp edges or burrs.

FIGURE 4-C

4.4 CABLE ENTRY PLATE - OPTION 3

1. Remove the rubber sealing caps from the ends of the MC4 connectors in the GP-CEP.
2. Plug the Positive and Negative MC4 Connectors from the solar panels directly into the GP-CEP
3. Locate the positive and negative cables exiting the GP-CEP and route these to the solar charge controller

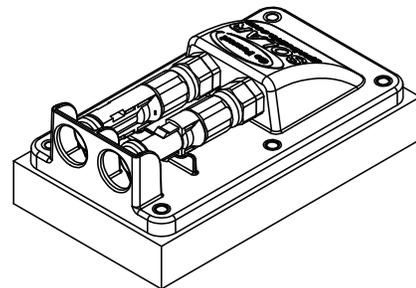


FIGURE 4-D

4.5 INSTALLING THE SOLAR CHARGE CONTROLLER



Ensure the Solar Panels are covered. Cover the nel faces completely with an opaque material to stop the production of electricity when working with panels or wiring – the cardboard shipping boxes are the perfect option to cover glass surface of the panels.

1. Use the template included in the solar charge controller Manual to mark the four mounting holes. For the GP-PWM-30 also mark the "cutting line for flush mounting".
2. Drill the mounting holes.
3. For the GP-PWM-30 use a keyhole or jig saw to cut along the rectangular outline previously marked.
4. Cut the MC4 extension cables to length, allow some excess for strain relief/flexibility.
5. Use the leftover cable to connect the controller to the batteries ensuring the Fuse holder is installed as per 4.7 & 4.8. If extra battery cable is required to connect to the battery bank, Go Power! recommends using an equivalent cable to that supplied with the kits: 10 Gauge Wire rated to – UL/cUL/USE2.
6. Mount the controller to the wall using the four wood screws provided.
7. Ensure the back of the controller is protected from damage by any object

4.6 INSTALLING THE FUSE AND FUSE HOLDER

1. Locate the positive battery cable from the solar charge controller
2. Plan where you can safely and easily access the fuse holder & fuse
3. Cut the battery positive cable from the solar charge controller to the planned lengths
4. Strip the fuse holder cable and positive cable from solar charge controller as shown in Fig 4-F
5. Thread the red heat-shrink onto the fuse holder cable
6. Insert the fuse holder and solar charge controller stripped cable ends into the butt splice as shown in Fig 4-G
7. Crimp the butt splice fully - test the connection by gently pulling on both cables
8. Thread the heat-shrink over the butt splice as shown in Fig 4-H
9. Use the heat gun to shrink the heat shrink over the butt splice as shown in Fig 4-I
10. Repeat the process for the other fuse holder cable & battery connection.
11. Do not install the fuse at this stage

4.7 CONNECT THE GP-PWM-30 TO BATTERY BANK

It is recommended to connect directly to the battery whenever possible. You can also connect to the converter/charger where the battery positive and negative wires connect to the converter/charger

1. Clean all corrosion from the battery terminals before proceeding
2. Crimp ring terminals onto the positive and negative cables to be attached to the battery
3. Check the ring terminal crimp connection by gently pulling on the cable and ring terminal
4. Attach the Negative (Black) ring terminal to the battery bank and tighten according to the battery manufacturers specification
5. Attach the Positive (Red) ring terminal to the battery bank and tighten according to the battery manufacturers specification
6. Check all electrical connections
7. Apply a protective coating to the battery terminals

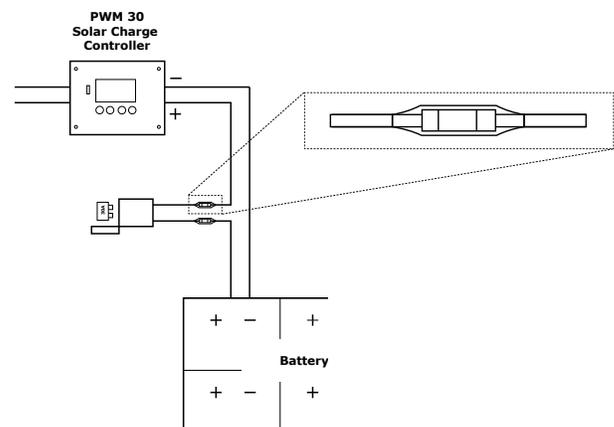


FIGURE 4-E



FIGURE 4-F

 


FIGURE 4-G



FIGURE 4-H

 


FIGURE 4-I

4.8 INITIAL CONNECTION AND OPERATING

1. Check all electrical connections and ensure all cables are securely fastened
2. Install the Fuse into the fuse holder, ensure the fuse holder is securely fastened
3. Remove the opaque material from the solar panels
4. Follow the solar charge controller user manual and operating steps

4.9 BATTERY BANK CONFIGURATIONS

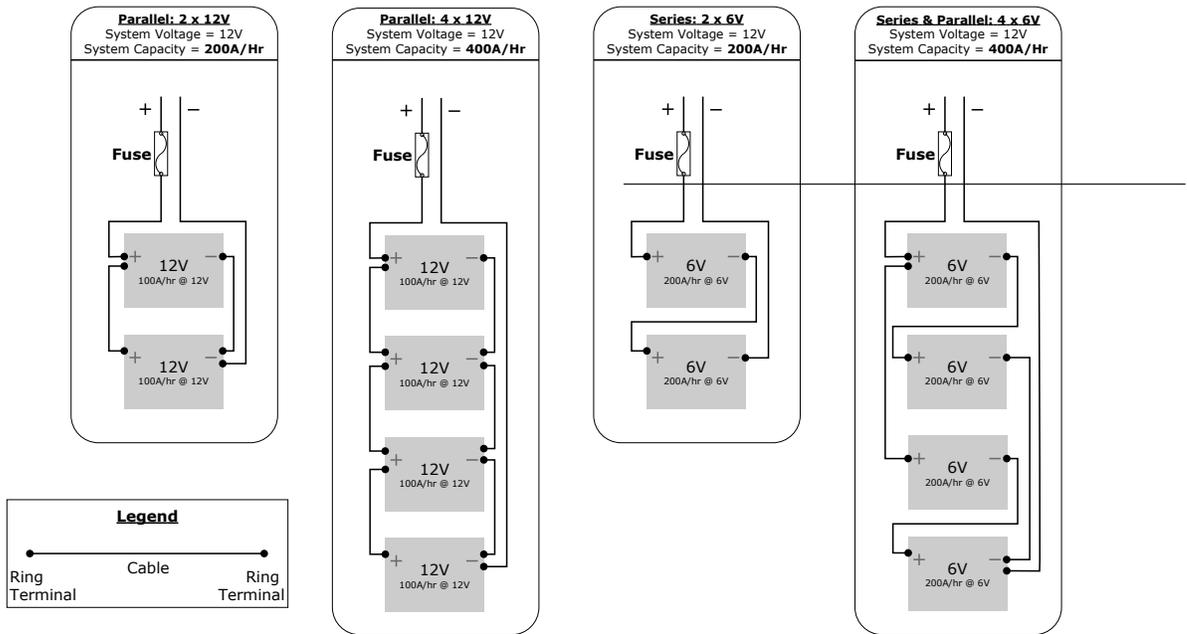


FIGURE 4-J: TYPICAL BATTERY BANK CONFIGURATIONS

5.1 INSPECTION

After installing any Go Power! Solar Kit or any other Go Power! products, all modules, electrical and mechanical components and connections should be inspected annually by a trained Go Power! or dealer representative or other qualified personnel for safe electrical and mechanical connections and to ensure modules are corrosion-free and vehicle mounting has not affected connections.

5.2 CLEANING

Although Go Power! Solar Kits are generally maintenance free, significant performance gains can be made with clean solar panels

1. Clean the solar panels monthly. Use water and a soft sponge or cloth. A mild non-abrasive cleanser can be used for more stubborn residue. Rinse well.
2. Clean solar panels more frequently during drier months, as they may become covered in dust more quickly. A pressure washer is not recommended.
3. Visual inspection – check the exterior for cracks, missing or broken hardware or other potential problems. Check all roof penetrations and replace sealant areas as required

5.3 LONG TERM STORAGE - RV

If your RV will be stored in extremely cold climates you may need to remove your batteries to prevent them from freezing. Please note if your solar panel(s) are covered by snow they will not produce power and can not be depended upon to keep the batteries topped up. In mild climate storage you can depend upon your solar system to top up your batteries when they are exposed to sunlight. Make sure that all parasitic draws are removed from the batteries i.e. Propane detector, clock radio, etc to make sure the solar panel(s) can keep the batteries topped up even with reduced sun exposure.

6. WARRANTY



6.1 WARRANTY LENGTH

The Go Power! warranty is valid against defects in materials and workmanship for the specific product warranty period. It is not valid against defects resulting from, but not limited to:

- Misuse and/or abuse, neglect or accident
- Exceeding the unit's design limits
- Improper installation, including, but not limited to, improper environmental protection and improper hook-up
- Acts of God, including lightning, floods, earthquakes, fire, and high winds
- Damage in handling, including damage encountered during shipment

A warranty shall be considered void if the warranted product is in any way opened or altered. The warranty will be void if any eyelet, rivets, or other fasteners used to seal the unit are removed or altered, or if the unit's serial number is in any way removed, altered, replaced, defaced, or rendered illegible.

6.2 WARRANTY RETURN PROCEDURE

Before contacting Go Power!'s customer service department, please read the "frequently asked questions" section of our website to troubleshoot the problem. If trouble persists:

1. Call your Go Power!™ Technical Support team (1-866-247-6527) or
2. Return defective product to place of purchase

Unless approved by Go Power! Management, all product shipped collect to Go Power! will be refused. Test items or items that are not under warranty, or units that are not defective, will be charged a minimum bench charge of (\$50.00 US) plus taxes and shipping. A 15% restocking charge will be applied on goods returned and accepted as "new" stock.

An RMA number (Return Materials Authorization number) from Go Power! Customer Service is required prior to returning any Go Power!. Go Power! reserves the right to refuse any items sent to Go Power! without an associated RMA number. To obtain an RMA number, please contact techsupport@gpelectric.com or Telephone 1-866-247-6527 or Fax 1-866-607-6527 worldwide.

OUT OF WARRANTY

Go Power! electronic products are non-repairable, Go Power! does not perform repairs on its products nor does it contract out those repairs to a third party. Go Power! does not supply schematics or replacement parts for any of its electronic products.

© 2021 Go Power!

Worldwide Technical Support and Product Information gpelectric.com

Go Power! | Dometic

201-710 Redbrick Street Victoria, BC, V8T 5J3

Tel: 1.866.247.6527

73835_MAN_GP_SOLAR_FLEX_revI

